

INSTALLATION INSTRUCTIONS

DRANJER™ J-RH5




Large Retrofit Floor Drain Model

Place the Dranjer underneath the existing floor drain cover plate. Then replace the cover plate.

The Dranjer J-RH5 fits round floor drains from 5-1/4" (13.3 cm) to 11" (28 cm). It also fits other shapes within these dimensions. Our smaller Dranjer model D-R2 fits drains from 2" in diameter.

To Install the Dranjer J-RH5

1. Remove the floor drain cover plate from the drain opening.
2. Clean the rim of the opening.
3. Apply a bead of caulking around the rim of the drain opening, as shown in Figure 1.
4. Hold the Dranjer and the cover plate together with the centers aligned and the cover plate on top, as shown in Figures 2 and 3. Allow slack in the rubber flange so the Dranjer hangs down about 1/2" (1 cm).
5. Lower the Dranjer and the cover plate into the opening. Push the cover plate back into position, pinching the rubber flange between the cover plate and the rim of the drain opening, as shown in Figure 4.
6. Stand on the cover plate to set it firmly.
7. Trim off the surplus rubber of the flange, as shown in Figure 5.
8. Leave a heavy weight on the cover plate until the caulking dries.
9. Pour a cup of water into the cover plate to fill the Dranjer.

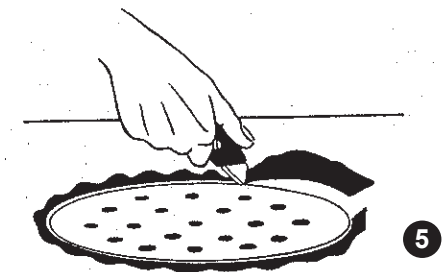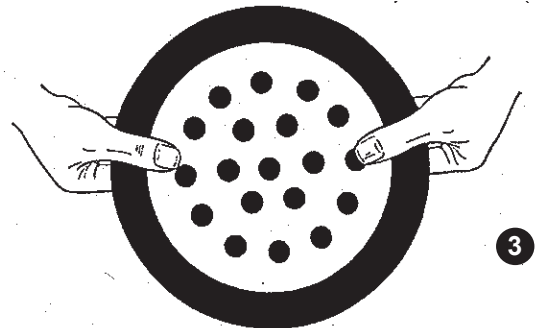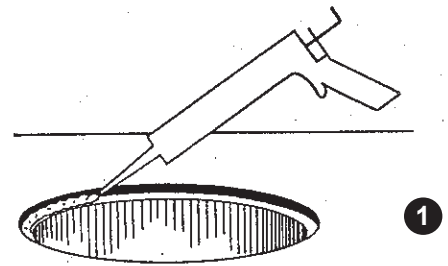

Dranjer™ Corporation

Dranjer.com